


HOW TO INSTALL THE MANSARD SOFFIT SEVEN STEPS FOR EASY INSTALLATION


STEP 1

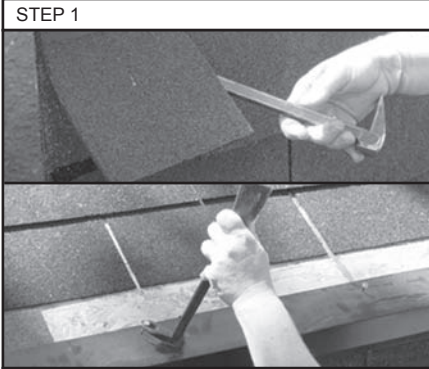

Starting at the eaves, remove the first two rows of shingles, and drip edge exposing the sheathing.

Remove the last two rows of shingles on the mansard exposing the sheathing as well.

STEP 2

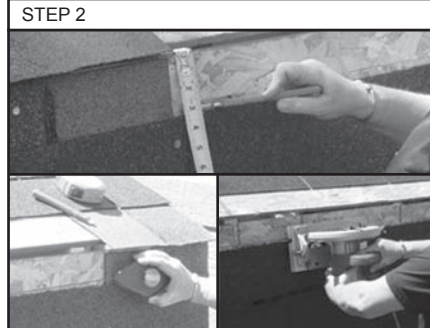

Starting from the top of the mansard, measure 3 inches down at both extremities of the roof and mark it with a pencil or chalk.

Using a chalk line, trace a line from one mark to the other.

Using a skilsaw, cut out the wood.

STEP 3



At the opening verify for any obstructions preventing air flow intake such as blocker boards or Insulation, and correct as necessary.

Make sure the insulation is in good condition and has been properly installed, preventing unnecessary heat loss. Replace the insulation if necessary.

STEP 7



STEP 4



Reinstall one row of shingles on the mansard, then cut off the excess flush with the opening. The soffit drip should cover the shingle and glue at bottom.

Install the left end cap onto one length of soffit, and the right end cap to onto another length. Fix the end caps 10 the drip edge with self tapping screws.


STEP 5



Starting on your left, install the first piece with the left end cap over the opening making sure that it IS firmly resting against the mansard and eave. (notice Hie overlap is on the right side of the mansard soffit drip edge) Repeat this with the second piece on the right extremity of the roof.

Using a chalk line, trace a line on lop of roof as well as on the mansard so that the soffit drip edge will be aligned properly.

STEP 6

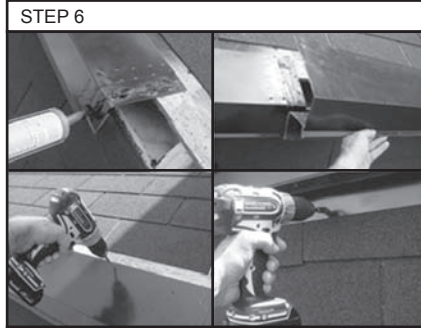

Apply a good quality sealant onto the overlap of the soffit drip edge you have just installed.

Install the second length over the overlap making sure to follow both lines (top & bottom) and secure to the roof With screws.

Repeat these steps for all other pieces. If the last piece is too long, remove the end cap, cut away excess off that side and reinstall.

Apply a good quality sealant over top of mansard drip edge 4-5 inches wide the full length.

Install shingles over the mansard drip edge.

Apply a good quality sealant on the sides of the end caps as well as on all the overlap joints at the mansard making them watertight.

N.B. Make sure that the sides of the end caps and all the overlap joints at the mansard are completely watertight.