




MODEL 201 IE-X

MODIFIED BITUMEN MEMBRANE APPLICATION

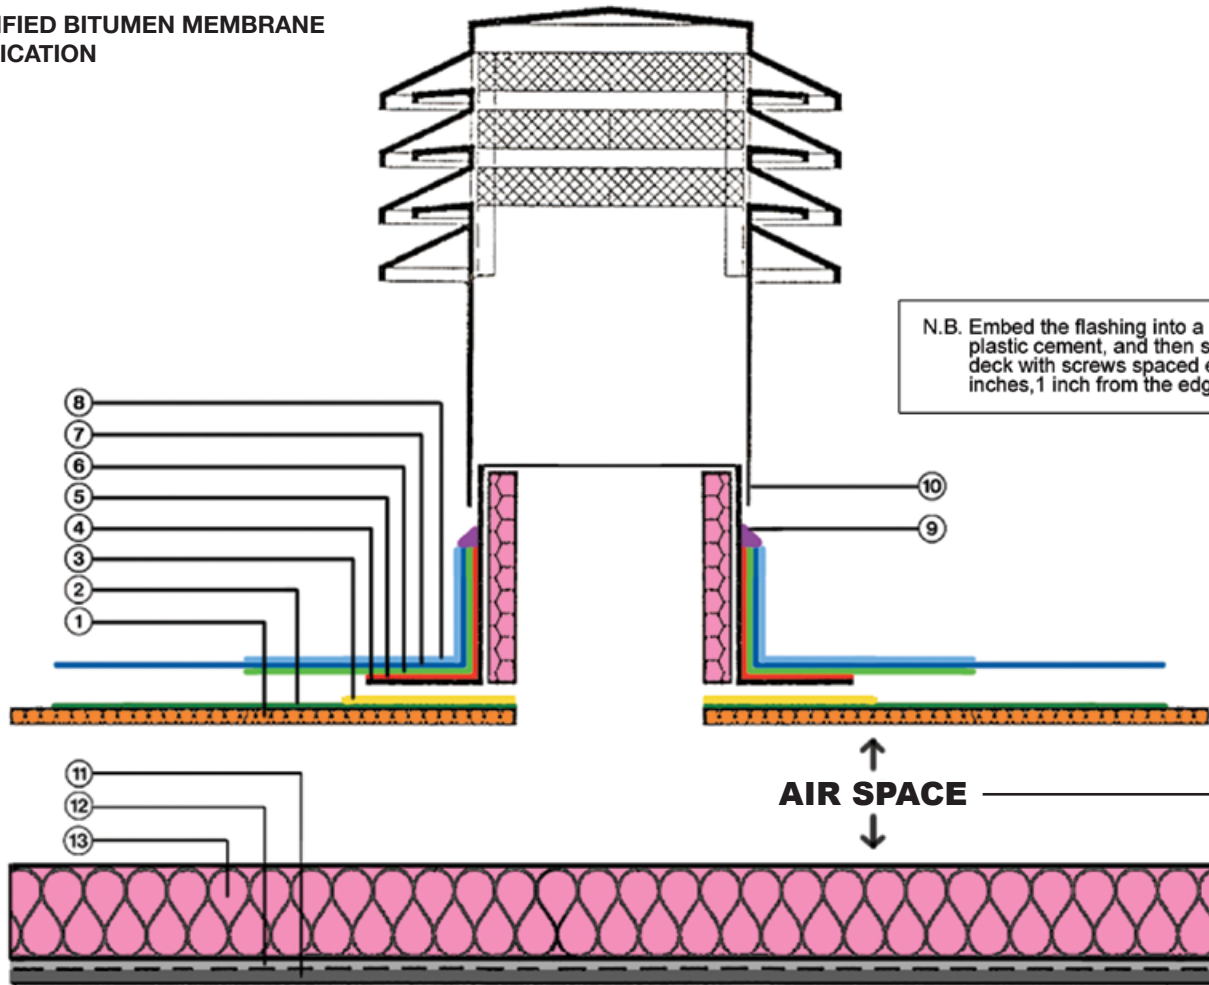

N.B. Embed the flashing into a good quality plastic cement, and then secure it to deck with screws spaced every 4 inches, 1 inch from the edge.

- ① ROOF DECK
- ② BASE SHEET
- ③ ELASTOMERIC CAULKING
- ④ METAL BASE FLASHING
- ⑤ PRIMER
- ⑥ BASE SHEET FLASHING
- ⑦ CAP SHEET
- ⑧ CAP SHEET FLASHING
- ⑨ SEALANT
- ⑩ SCREW
- ⑪ DRYWALL
- ⑫ VAPOR BARRIER
- ⑬ INSULATION

NET VENTILATION AREA BETWEEN ROOF DECK & INSULATION	ROOF AREA THAT ONE VENTILATOR 201-I-EX (12"X12") CAN VENTILATE
1 INCH TO 8 INCHES	201-18 IS NOT RECOMMENDED USE MODEL 102-PI
7 INCHES TO 12 INCHES	325 SQUARE FEET
13 INCHES TO 24 INCHES	376 SQUARE FEET
25 INCHES AND MORE	425 SQUARE FEET

